

Autonics

DUAL INDICATOR TEMPERATURE CONTROLLER

TCN4 SERIES

MANUAL



Thank you very much for selecting Autonics products.
For your safety, please read the following before using.

Caution for your safety

- ※ Please keep these instructions and review them before using this unit.
- ※ Please observe the cautions that follow;
 - Warning** Serious injury may result if instructions are not followed.
 - Caution** Product may be damaged, or injury may result if instructions are not followed.
- ※ The following is an explanation of the symbols used in the operation manual.
 - Caution:** Injury or danger may occur under special conditions.

Warning

- In case of using this unit with machinery (Ex: nuclear power control, medical equipment, ship, vehicle, train, airplane, combustion apparatus, safety device, crime/disaster prevention equipment, etc) which may cause damages to human life or property, it is required to install fail-safe device.
 - It may cause a fire, human injury or damage to property.
- Install the unit on a panel.
 - It may cause electric shock.
- Do not connect, inspect or repair this unit when power is on.
 - It may cause electric shock.
- Wire properly after checking terminal number.
 - It may cause a fire.
- Do not disassemble the case. Please contact us if it is required.
 - It may cause electric shock or a fire.

Caution

- This unit shall not be used outdoors.
 - It may shorten the life cycle of the product or cause electric shock.
- When connect wire, AWG 20(0.50mm²) should be used and screw bolt on terminal block with 0.74N.m to 0.90N-m strength.
 - It may cause a malfunction or fire due to contact failure.
- Please observe the rated specifications.
 - It may shorten the life cycle of the product and cause a fire.
- Do not use beyond of the rated switching capacity of relay contact.
 - It may cause insulation failure, contact melt, contact failure, relay broken and fire etc.
- In cleaning unit, do not use water or organic solvent. And use dry cloth.
 - It may cause electric shock or a fire.
- Do not use this unit in place where there are flammable or explosive gas, humidity, direct ray of the light, radiant heat, vibration and impact etc.
 - It may cause a fire or an explosion.
- Do not inflow dust or wire dregs into the unit.
 - It may cause a fire or a malfunction.
- Please wire properly after checking the terminal polarity when connecting temperature sensor.
 - It may cause a fire or an explosion.
- In order to install the units with reinforced insulation, use the power supply unit which basic insulation level is ensured.

Ordering information

T	CN	4	S	-	2	4	R	-	P
Item	Setting type	Digit	Size	Power supply	Control output	Wiring method	Item	Item	Item
	CN	4	S	2	R	No-mark			
						Bolt wiring method			
						Connector plug connection method ^{※1}			
						Relay contact + SSR drive output ^{※2}			
						24VAC 50/60Hz, 24-48VDC			
						100-240VAC 50/60Hz			
						Alarm 1 + Alarm2 output			
						DIN W48 X H48mm			
						DIN W72 X H72mm			
						DIN W48 X H96mm			
						DIN W96 X H96mm			
						9999 (4 digit)			
						Dual display type, set by touch switch			
						Temperature controller			


※1: Only for TCN4S model.
 ※2: In case of the AC voltage model, SSR drive output method (standard ON/OFF control, cycle control, phase control) is available to select.
 ※The above specifications are subject to change without notice.

Specification

Series	TCN4S	TCN4M	TCN4H	TCN4L
Power supply	AC Power 100-240VAC 50/60Hz	AC/DC Power 24VAC 50/60Hz, 24-48VDC		
Allowable voltage range	90 to 110% of rated voltage			
Power consumption	AC Power Max. 5VA(100-240VAC 50/60Hz)	AC/DC Power Max. 5V(24VAC 50/60Hz), Max. 3W(24-48VDC)		
Display method	7 Segment (PV: red, SV: green), other display part(green, red) LED method			
Character size	PV(WXH) 7.0 X 15.0mm	9.5 X 20.0mm	7.0 X 14.6mm	11.0 X 22.0mm
Input type	RTD	DIN Pt100Ω, Cu50Ω (Allowable line resistance max.5Ω per a wire)	K(CA), J(IC), L(IC), T(CC), R(PR), S(PR)	
Display accuracy ^{※1}	TC	At room temperature(23°C ± 5°C): (PV ± 0.5% or ± 1°C, select the higher one) ± 1 digit Out of room temperature range: (PV ± 0.5% or ± 2°C, select the higher one) ± 1 digit For TCN4S-□P, add ± 1°C by accuracy standard.		
Control output	Relay 250VAC 3A 1a	SSR 12VDC±2V 20mA Max.		
Alarm output	AL1, AL2 Relay: 250VAC 1A 1a			
Control method	ON/OFF control, P, PI, PD, PID control			
Hysteresis	1 to 100°C/°F (0.1 to 50.0°C/°F)			
Proportional band(P)	0.1 to 999.9°C/°F			
Integral time(I)	0 to 9999 sec.			
Derivative time(D)	0 to 9999 sec.			
Control period(T)	0.5 to 120.0 sec.			
Manual reset	0.0 to 100.0%			
Sampling period	100ms			
Dielectric strength	AC power 2000VAC 50/60Hz 1min.(Between input terminal and power terminal)	AC/DC power 1000VAC 50/60Hz 1min.(Between input terminal and power terminal)		
Vibration	0.75mm amplitude at frequency of 5 to 55Hz in each X, Y, Z directions for 2 hours			
Relay life cycle	Mechanical	OUT: Over 5,000,000 times, AL1/2: Over 5,000,000 times		
Insulation resistance	Electrical	OUT: Over 200,000 times(250VAC 3A resistive load) AL1/2: Over 300,000 times(250VAC 1A resistive load)		
Noise	Square-wave noise by noise simulator(pulse width 1μs) ±2KV R-phase and S-phase			
Memory retention	Approx. 10 years (When using non-volatile semiconductor memory type)			
Environ-ment	Ambient temp.	-10 to 50°C, Storage: -20 to 60°C		
	Ambient humi.	35 to 85%RH, Storage: 35 to 85%RH		
Insulation type	Double insulation or reinforced insulation (Mark: □). Dielectric strength between the measuring input part and the power part: AC Power 2kV, AC/DC Power 1kV)			
Approval	CE, RoHS (except AC/DC voltage type and TCN4S-□P)			
Weight ^{※2}	Approx. 147g (approx. 100g)	Approx. 203g (approx. 133g)	Approx. 194g (approx. 124g)	Approx. 275g (approx. 179g)

- ※1: ○ At room temperature(23°C±5°C)
 - Below 200°C of thermocouple R(PR), S(PR) is (PV ± 0.5% or ± 3°C, select the higher one) ± 1 digit
 - Over 200°C of thermocouple R(PR), S(PR) is (PV ± 0.5% or ± 2°C, select the higher one) ± 1 digit
 - Thermocouple L (IC), RTD Cu50Ω is (PV ± 0.5% or ± 2°C, select the higher one) ± 1 digit
 ○ Out of room temperature range
 - Below 200°C of thermocouple R(PR), S(PR) is (PV ± 1.0% or ± 6°C, select the higher one) ± 1 digit
 - Over 200°C of thermocouple R(PR), S(PR) is (PV ± 0.5% or ± 5°C, select the higher one) ± 1 digit
 - Thermocouple L(IC), RTD Cu50Ω is (PV ± 0.5% or ± 3°C, select the higher one) ± 1 digit
 For TCN4S-□P, add ± 1°C by accuracy standard.
 ※2: The weight in parentheses is only unit weight.
 ※ Environment resistance is rated at no freezing or condensation.

Parts description

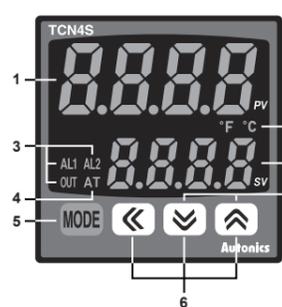

- Present temperature (PV) display (Red)**
 - RUN mode: Present temperature (PV) display
 - Parameter setting mode: Parameter display
- Set temperature (SV) display (Green)**
 - RUN mode: Set temperature (SV) display
 - Parameter setting mode: Parameter setting value display
- Control/Alarm output display indicator**
 - OUT: It turns ON when the control output is ON. During SSR drive output type in CYCLE/PHASE control, this indicator turns ON when MV is over 3.0%.
 - AL1/AL2: It turns ON when the alarm output is ON.
- Auto tuning indicator**
 - AT indicator flashes by every 1 sec during operating auto tuning.
- MODE key**
 - Used when entering into parameter groups, returning to RUN mode, moving parameter, and saving setting values.

Adjustment

Used when entering into set value change mode, digit moving and digit up/down.

Digital input key

Press $\left[\text{MODE} \right] + \left[\text{key} \right]$ for 3 sec. to operate the set function (RUN/STOP, alarm output reset, auto tuning) in digital input key [d] - t].

Temperature unit (°C/°F) indicator

It shows current temperature unit.

Input sensor and temperature range

Input sensor	Display	Temperature range(°C)	Temperature range(°F)
Thermocouple	K(CA)	tcRH	-50 to 1200
		tcRL	-50.0 to 999.9
		tcCH	-30 to 800
		tcCL	-30.0 to 800.0
	J(IC)	tcRH	-40 to 800
		tcCH	-40.0 to 800.0
		tcRL	-50 to 400
		tcCL	-50.0 to 400.0
	L(IC)	tcRH	-40 to 800
		tcCH	-40.0 to 800.0
		tcRL	-50 to 400
		tcCL	-50.0 to 400.0
T(CC)	tcRH	0 to 1700	
	tcCH	0 to 1700	
	tcRL	0 to 1700	
	tcCL	0 to 1700	
R(PR)	tcRH	0 to 1700	
	tcCH	0 to 1700	
	tcRL	0 to 1700	
	tcCL	0 to 1700	
S(PR)	tcRH	0 to 1700	
	tcCH	0 to 1700	
	tcRL	0 to 1700	
	tcCL	0 to 1700	
RTD	DPT100Ω	tcRH	-100 to 400
		tcCH	-100.0 to 400.0
	Cu50Ω	tcRH	-50 to 200
		tcCH	-50.0 to 200.0

Dimensions

(Unit: mm)

1) TCN4S
 <Bracket>

2) TCN4S-□P
 <Bracket>

3) TCN4M
 <Bracket>

4) TCN4H
 <Bracket>


5) TCN4L
 <Bracket>

6) Terminal cover(sold separately)
 • RSA-COVER (48×48mm)
 • RMA-COVER (72×72mm)
 • RHA-COVER (48×96mm)
 • RLA-COVER (96×96mm)

7) Panel cut-out


Model	A	B	C	D
TCN4S	Min. 65	Min. 65	45 ^{※6}	45 ^{※6}
TCN4M	Min. 90	Min. 90	68 ^{※7}	68 ^{※7}
TCN4H	Min. 65	Min. 115	45 ^{※6}	92 ^{※8}
TCN4L	Min. 115	Min.115	92 ^{※8}	92 ^{※8}

Connections

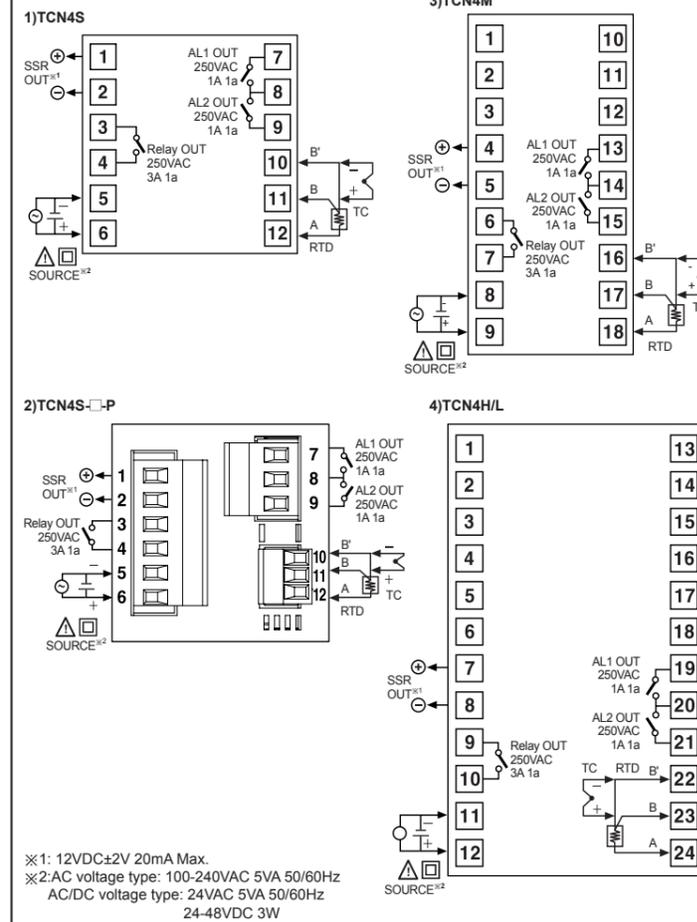

※1: 12VDC±2V 20mA Max.
 ※2: AC voltage type: 100-240VAC 5VA 50/60Hz
 AC/DC voltage type: 24VAC 5VA 50/60Hz
 24-48VDC 3W

Flow chart for setting group

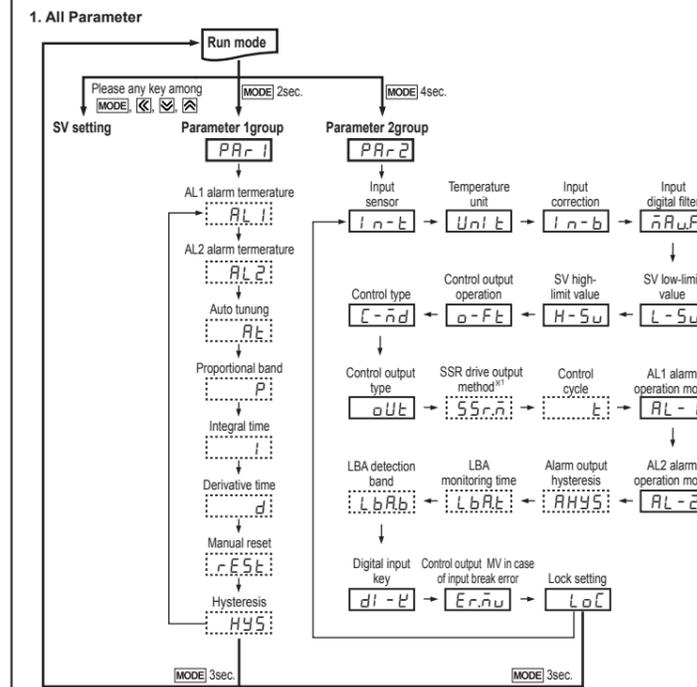

※ Press [MODE] key over 3 sec in any parameter group, it saves the set value and returns to RUN mode. (Exception: Press [MODE] key once in SV setting group, it returns to RUN mode).
 ※ If no key entered for 30 sec., it returns to RUN mode automatically and the set value of parameter is not be saved.
 ※ Press [MODE] key again within 1 sec. after returning to RUN mode, it advances of the first parameter of previous parameter group.
 ※ Press [MODE] key to move next parameter.
 ※ Parameter marked in [] might not be displayed depending on other parameter settings.
 ※ Set parameter as "Parameter 2 group → Parameter 1 group → Setting group of set value" order considering parameter relation of each setting group.
 ※1: It is not displayed for AC/DC power model (TCN4-□-22R).

Parameter	Display	Description
Input sensor	$i n - b$	Set range: Refer to 'Input sensor and temperature range'. * If changing input sensor, SV, $i n - b$, $H - 5u$, $L - 5u$, $AL 1$, $AL 2$, $LbRt$, $LbRb$, $PHYS$ parameter values are initialized.
Temperature unit	$U n i t$	Set range: 0C or 0F * If changing temperature unit, SV, $i n - b$, $H - 5u$, $L - 5u$, $AL 1$, $AL 2$, $LbRt$, $LbRb$, $PHYS$ parameter values are initialized.
Input correction	$i n - b$	Set range: 0.1 to 120.0 sec. * When changing input sensor type [$i n - b$], it changes automatically as min. value of the changed input sensor.
Input digital filter	$n A u f$	Set range: 0.1 to 120.0 sec. * When changing input sensor type [$i n - b$], it changes automatically as max. value of the changed input sensor.
SV low-limit value	$L - 5u$	Set range: Within the rated temperature range by input sensor [$L - 5u < (H - 5u - 1digit)$]. * When changing SV lower limit value, if $SV < L - 5u$, SV is initialized as $L - 5u$. * In case of changing input sensor type [$i n - b$], it changes automatically as min. value of the changed input sensor.
SV high-limit value	$H - 5u$	Set range: Within the rated temperature range by input sensor [$H - 5u > (L - 5u + 1digit)$]. * When changing SV higher limit value, if $SV > H - 5u$, SV is initialized as $H - 5u$. * In case of changing input sensor type [$i n - b$], it changes automatically as max. value of the changed input sensor.
Control output operation	$o - F t$	HEAT → COOL * When changing control output operation, $Ernu$ is initialized.
Control type	$C - n d$	PI d → ONOFF * When changing control type, $Ernu$ is initialized (control output MV is below 100%) and $d i - t$ turns OFF automatically.
Control output type	$o u t$	$r l y$ → $55r$ * It is displayed when selecting control output [$o u t$] as [$55r$]. * It is not displayed for AC/DC power model (TCN4□-22R).
SSR drive output method	$55r - n$	Set range: 0.5 to 120.0 sec. * In case of Relay drive output [$r l y$] of control output [$o u t$], it is set as 20.0 sec. In case of SSR drive output [$55r$] of that, it is set as 2.0 sec. * t is not displayed when SSR drive output [$55r - n$] method is set as $C y c l$, $P h a s$.
Control cycle	t	Set range: 0.5 to 120.0 sec. * In case of Relay drive output [$r l y$] of control output [$o u t$], it is set as 20.0 sec. In case of SSR drive output [$55r$] of that, it is set as 2.0 sec. * t is not displayed when SSR drive output [$55r - n$] method is set as $C y c l$, $P h a s$.
AL1 alarm operation mode	$AL - 1$	For more details refer to Functions 6. Alarm.
AL2 alarm operation mode	$AL - 2$	For more details refer to Functions 6. Alarm.
Alarm output hysteresis	$A H Y 5$	Set range: Refer to Functions 4. Alarm output hysteresis. * $A H Y 5$ is not displayed when AL1, AL2 alarm operation mode [$AL - 1$, $AL - 2$] is set as [$A n d$, $5 b R t$, $L b R t$].
LBA monitoring time	$L b R t$	Set range: 0 to 9999 sec. * '0' is set, loop break alarm function is OFF. * $L b R t$ is displayed when AL1, AL2 alarm operation mode [$AL - 1$, $AL - 2$] is set as $L b R t$.
LBA monitoring range	$L b R b$	Set range: 0 to 999(0.0 to 999.9)°C/°F. '0' is set, loop break alarm function is OFF. * $L b R b$ is displayed when AL1, AL2 alarm operation mode [$AL - 1$, $AL - 2$] is set as $L b R t$ and $L b R t$ is not '0'.
Digital input key	$d i - t$	Set range: 0.0 to 100.0% * Only 0.0, 100% are displayed when control type [$C - n d$] is set as $o n o f$. * When changing PID control to ON/OFF control, if MV is below 100.0%, it is initialized as 0.0%.
Control output MV in case of input break error	$Ernu$	Set range: 0.0 to 100.0% * Only 0.0, 100% are displayed when control type [$C - n d$] is set as $o n o f$. * When changing PID control to ON/OFF control, if MV is below 100.0%, it is initialized as 0.0%.
Lock setting	$L o c k$	Set range: 0.0 to 100.0% * Only 0.0, 100% are displayed when control type [$C - n d$] is set as $o n o f$. * When changing PID control to ON/OFF control, if MV is below 100.0%, it is initialized as 0.0%.

Parameter	Display	Description
AL1 alarm temp.	$AL 1$	Set range: Deviation alarm(-FS to FS), Absolute value alarm(temperature range) In case alarm operation mode [$AL - 1$, $AL - 2$] of Parameter 2 group [$A n d$, $5 b R t$, $L b R t$], no parameters is displayed.
AL2 alarm temp.	$AL 2$	Set range: Deviation alarm(-FS to FS), Absolute value alarm(temperature range) In case alarm operation mode [$AL - 1$, $AL - 2$] of Parameter 2 group [$A n d$, $5 b R t$, $L b R t$], no parameters is displayed.
Auto tuning	$A t$	Set range: 0.1 to 999.9°C/°F * It is displayed when control type [$C - n d$] of parameter 2 group is set $o n o f$.
Proportional band	P	Set range: 0.1 to 999.9°C/°F
Integral time	I	Set range: 0 to 9999 sec. Integral operation is OFF when set value is "0".
Derivative time	d	Set range: 0 to 9999 sec. Derivative operation is OFF when set value is "0".
Manual reset	$r E 5 t$	Set range: 0.0 to 100.0% / It is displayed in P/ID control.
Hysteresis	$H Y 5$	Set range: 0.1 to 50.0°C/°F * It is displayed when control type [$C - n d$] of parameter 2 group is set $o n o f$.

4. SV setting
You can set the temperature to control with [MODE], [OK], [ENT], [DEL] keys.
Set range is within SV lower limit value [$L - 5u$] to SV higher limit value [$H - 5u$].
Ex) In case of changing set temperature from 210°C to 250°C

Functions

1. Auto tuning [At]
Auto tuning measures the control subject's thermal characteristics and thermal response rate, and then determines the necessary PID time constant. (When control type [$C - n d$] is set as $PI d$, it is displayed.)
Application of the PID time constant realizes fast response and high precision temperature control. If error [$o P E n$] occurs during auto tuning, it stops this operation automatically. To stop auto tuning, change the set as [$o F F$]. (It maintains P, I, D values of before auto tuning.)

2. Hysteresis [HY5]
In case of ON/OFF control, set between ON and OFF intervals as hysteresis. (When control type [$C - n d$] is set as $o n o f$, it is displayed.) If hysteresis is too small, it may cause control output hunting (takeoff, chattering) by external noise, etc.

3. SSR drive output selection(SSRP function) [55r-n]
● Realizing high accuracy and cost effective temperature control with both current output (4-20mA) and linear output(cycle control and phase control)
● SSRP function is selectable one of standard ON/OFF control, cycle control, phase control by utilizing standard SSR drive voltage output.
● Select one of standard ON/OFF control [$5 t n d$], cycle control [$C y c l$], phase control [$P h a s$] at SSR drive output method [$55r - n$] of parameter 2 group. For cycle control, connect zero cross turn-on SSR (random turn-on SSR is also available). For phase control, connect random turn-on SSR.

Temperature controller (TCN4 series)

● When selecting phase or cycle control mode, the power supply for load and temperature controller must be the same.
● In case of selecting PID control type and phase [$P h a s$] / cycle [$P h a s$] control output modes, control cycle [t] is not allowed to set.
● For AC/DC power model (TCN□-22R), this parameter is not displayed and it is available only standard control by relay of SSR.

1) Standard ON/OFF control mode [5tnd]
A mode to control the load in the same way as Relay output type.
(ON: output level 100%, OFF: output level 0%)

2) Cycle control mode [Cycl]
A mode to control the load by repeating output ON / OFF according to the rate of output within setting cycle. Having improved ON / OFF noise feature by Zero Cross type.

3) Phase control mode [Phas]
A mode to control the load by controlling the phase within AC half cycle. Serial control is available. RANDOM Turn-on type SSR must be used for this mode.

4. Alarm output hysteresis [AHY5]
It displays alarm output ON and OFF interval and hysteresis is applied to both AL1 OUT and AL2 OUT.

Ex) AL1 alarm operation [$AL - 1$]: $A n d$
AL1 alarm operation [$AL 1$]: 10°C
Alarm output hysteresis [$A H Y 5$]: 4

5. Digital input key [di-t] [3sec.]

Parameter	Operation
OFF	$o F F$ It does not use digital input key function.
RUN/STOP	$5 t o p$ It is available to pause on control output and auxiliary output (except loop break alarm, sensor break alarm) except control output operates normally as set. Press digital input key for 3sec to re-start the operation.
Clear alarm output function	$R L - E$ It is available to clear alarm output by force. (It is only when alarm option is alarm latch, standby sequence.) Clear alarm is able to only for out of alarm operation range. Alarm operates normally right after clear alarm.
Auto tuning	$A t$ Auto tuning function, it is same as auto tuning function [$A t$] of parameter 1 group. (You can execute auto tuning from parameter 1 group, and finish it by digital input key.) * When control type [$C - n d$] is set as $PI d$, $A t$ is displayed. When it is set as $o n o f$, digital input key [$d i - t$] is changed as $o F F$.

6. Alarm
There are two alarms which operate individually. You can set combined alarm operation and alarm option.
Use digital input key(set as $R L - E$) or turn OFF power and re-start this unit to release alarm operation.

1) Alarm operation

Mode	Name	Alarm operation	Description
$R A n d$	Deviation high-limit alarm	OFF → ON ON → OFF High deviation: Set as 10°C	No alarm output
$R A n l$	Deviation low-limit alarm	ON → OFF OFF → ON Low deviation: Set as 10°C	If deviation between PV and SV as high-limit is higher than set value of deviation temperature, the alarm output will be ON.
$R A n h$	Deviation high/low-limit alarm	ON → OFF OFF → ON High/Low deviation: Set as 10°C	If deviation between PV and SV as high/low-limit is higher than set value of deviation temperature, the alarm output will be ON.
$R A n r$	Deviation high/low-limit reserve alarm	OFF → ON ON → OFF High/Low deviation: Set as 10°C	If deviation between PV and SV as high/low-limit is higher than set value of deviation temperature, the alarm output will be OFF.
$R A n s$	Absolute value high limit alarm	OFF → ON ON → OFF Absolute-value Alarm: Set as 90°C	If PV is higher than the absolute value, the output will be ON.
$R A n l$	Absolute value low limit alarm	ON → OFF OFF → ON Absolute-value Alarm: Set as 90°C	If PV is lower than the absolute value, the output will be ON.
$S b R t$	Sensor break alarm	—	It will be ON when it detects sensor disconnection.
$L b R t$	Loop break alarm	—	It will be ON when it detects loop break.

* H: Alarm output hysteresis [$A H Y 5$]

2) Alarm option

Option	Name	Description
$R A n a$	Standard alarm	If it is an alarm condition, alarm output is ON. If it is a clear alarm condition, alarm output is OFF.
$R A n b$	Alarm latch	If it is an alarm condition, alarm output is ON and maintains ON status. (Alarm output HOLD)
$R A n c$	Standby sequence 1	First alarm condition is ignored and from second alarm condition, standard alarm operates. When power is supplied and it is an alarm condition, this first alarm condition is ignored and from the second alarm condition, standard alarm operates.
$R A n d$	Alarm latch and standby sequence 1	If it is an alarm condition, it operates both alarm latch and standby sequence. When power is supplied and it is an alarm condition, this first alarm condition is ignored and from the second alarm condition, alarm latch operates.
$R A n e$	Standby sequence 2	First alarm condition is ignored and from second alarm condition, standard alarm operates. When re-applied standby sequence and if it is alarm condition, alarm output does not turn ON. After clearing alarm condition, standard alarm operates.
$R A n f$	Alarm latch and standby sequence 2	Basic operation is same as alarm latch and standby sequence 1. It operates not only by power ON/OFF, but also alarm setting value, or alarm option changing. When re-applied standby sequence and if it is alarm condition, alarm output does not turn ON. After clearing alarm condition, alarm latch operates.

* Condition of re-applied standby sequence for standby sequence 1, alarm latch and standby sequence 1: Power ON
Condition of re-applied standby sequence for standby sequence 2, alarm latch and standby sequence 2: Power ON, changing set temperature, alarm temperature ($AL 1$, $AL 2$) or alarm operation ($AL - 1$, $AL - 2$), switching STOP mode to RUN mode.

3) Sensor break alarm
The function that alarm output will be ON when sensor is not connected or when sensor's disconnection is detected during temperature controlling. You can check whether the sensor is connected with buzzer or other units using alarm output contact. It is selectable between standard alarm [$S b R t$] or alarm latch [$S b R t$].

4) Loop break alarm(LBA)
It checks control loop and outputs alarm by temperature change of the subject. For heating control(cooling control), when control output MV is 100%(0% for cooling control) and PV is not increased over than LBA detection band [$L b R b$] during LBA monitoring time [$L b R t$], or when control output MV is 0%(100% for cooling control) and PV is not decreased below LBA detection band [$L b R b$] during LBA monitoring time [$L b R t$], alarm output turns ON.

Start control to ①
When control output MV is 100%, PV is increased over than LBA detection band [$L b R b$] during LBA monitoring time [$L b R t$].

① to ② The status of changing control output MV (LBA monitoring time is reset.)

② to ③ When control output MV is 0% and PV is not decreased below than LBA detection band [$L b R b$] during LBA monitoring time [$L b R t$], loop break alarm (LBA) turns ON after LBA monitoring time.

③ to ④ Control output MV is 0% and loop break alarm (LBA) turns and maintains ON.

④ to ⑥ The status of changing control output MV (LBA monitoring time is reset.)

⑥ to ⑦ When control output MV is 100% and PV is not increased over than LBA detection band [$L b R b$] during LBA monitoring time [$L b R t$], loop break alarm (LBA) turns ON after LBA monitoring time.

⑦ to ⑧ When control output MV is 100% and PV is increased over than LBA detection band [$L b R b$] during LBA monitoring time [$L b R t$], loop break alarm (LBA) turns OFF after LBA monitoring time.

⑧ to ⑨ The status of changing control output MV (LBA monitoring time is reset.)

* When executing auto-tuning, LBA detection band [$L b R b$] and LBA monitoring time are automatically set based on auto tuning value. When alarm operation mode [$AL - 1$, $AL - 2$] is set as loop break alarm(LBA) [$L b R t$], LBA detection band [$L b R b$] and LBA monitoring time [$L b R t$] parameter is displayed.

7. Manual reset [rE5t]
When selecting P/ID control mode, certain temperature difference exists even after PV reaches stable status because heater's rising and falling time is inconsistent due to thermal characteristics of controlled objects, such as heat capacity, heater capacity. This temperature difference is called offset and manual reset [$r E 5 t$] function is to set/correct offset.
When PV and SV are equal, reset value is 50.0%. After control is stable, PV is lower than SV, reset value is over 50.0% or PV is higher than SV, reset value is below 50.0%.

8. Input correction [i n - b]
Controller itself does not have errors but there may be error by external input temperature sensor. This function is for correcting this error.
Ex) If actual temperature is 80°C but controller displays 78°C, set input correction value [$i n - b$] as '002' and controller displays 80°C.
* As the result of input correction, if current temperature value (PV) is over each temperature range of input sensor, it displays 'HHHH' or 'LLLL'.

9. Input digital filter [nAuF]
If current temperature (PV) is fluctuating repeatedly by rapid change of input signal, it reflects to MV and stable control is impossible. Therefore, digital filter function stabilizes current temperature value. For example, set input digital filter value as 0.4 sec, and it applies digital filter to input values during 0.4 sec and displays this values. Current temperature may be different by actual input value.

10. Error

Display	Description	Troubleshooting
$o P E n$	Flashes if input sensor is disconnected or sensor is not connected.	Check input sensor state.
HHHH	Flashes if measured sensor input is higher than temperature range.	When input is within the rated temperature range, this display disappears.
LLLL	Flashes if measured sensor input is lower than temperature range.	

Factory default

1. SV setting

Parameter	Default
—	0

2. Parameter 1 group

Parameter	Default	Parameter	Default	Parameter	Default	Parameter	Default
$AL 1$	1250	$AL 2$	1250	$A t$	oFF	i	0000
$AL 2$	1250	P	0.100	d	0000	$H Y 5$	002

3. Parameter 2 group

Parameter	Default	Parameter	Default	Parameter	Default	Parameter	Default
$i n - b$	0.000	$H - 5u$	1200	t	02.00	$L b R b$	0002
$U n i t$	0C	$o - F t$	HEAT	$AL - 1$	$A n d$	$d i - t$	5t o P
$i n - b$	0000	$C - n d$	PI d	$AL - 2$	$A n d$	$Ernu$	0000
$n A u F$	000.1	$o u t$	$r l y$	$A H Y 5$	00.1	$L o c k$	oFF
$L - 5u$	-050	$55r - n$	5t n d	$L b R t$	0000		

* The AC/DC voltage models do not have SSR drive output method [$55r - n$]. In case of control output [$o u t$], if set as $55r$, it supports only ON/OFF output.

Installation

● TCN4S(48X48mm) Series

● Other Series

* Insert product into a panel, fasten bracket by pushing with tools as shown above.

Caution for using

- The connection wire of this unit should be separated from the power line and high voltage line in order to prevent from inductive noise.
- For crimp terminal, select following shaped terminal (M3).

- Please install power switch or circuit-breaker in order to cut power supply off.
- Install power switch or circuit-breaker to supply or cut off the power. Switch or circuit-breaker should be installed near by users for convenient control.
- Do not use this product as Volt-meter or Ampere-meter, this is a temperature controller.
- In case of using RTD sensor, 3 wire type must be used. If you need to extend the line, 3 wires must be used with the same thickness as the line. It might cause the deviation of temperature if the resistance of line is different.
- In case of making power line and input signal line closely, line filter for noise protection should be installed at power line and input signal line should be shielded.
- Keep away from the high frequency instruments. (High frequency welding machine & sewing machine, large capacity SCR controller)
- When supplying measuring input, if 'HHHH' or 'LLLL' is displayed, measuring input may have problem. Turn off the power and check the line.
- Installation environment
 - ① It shall be used indoor.
 - ② Altitude Max. 2000m.
 - ③ Pollution Degree 2.
 - ④ Installation Category II.

* It may cause malfunction if above instructions are not followed.

Major product

- Photoelectric sensors
- Fiber optic sensors
- Door sensors
- Door side sensors
- Area sensors
- Proximity sensors
- Pressure sensors
- Rotary encoders
- Connector/sockets
- Switching mode power supplies
- Control switches/Lamps/Buzzers
- I/O Terminal Blocks & Cables
- Stepper motors/drivers/motion controllers
- Graphic/Logic panels
- Field network devices
- Laser marking system(Fiber, CO₂, Nd:YAG)
- Laser welding/soldering system
- Temperature controllers
- Temperature/Humidity transducers
- SSR/Power controllers
- Counters
- Timers
- Panel meters
- Tachometer/Pulse(Rate) meters
- Display units
- Sensor controllers